## Racewood Event simulator leg sensor setup guide




## Please ensure that you read the entire document and familiarise yourself with the parts before adjusting the leg sensors

## Check

in the centre of each kick strip using the yellow push scale press each sensor in turn to **2.5Kg**.

The display on the dressage instruction screen should show around 50. If it does not then you will need to adjust the sensor.

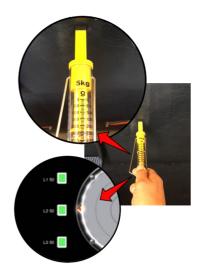

## **Adjust**

first switch off the unit and remove the upper plastic and wooden lid.

Remove the lid of the box marked **LEG SENSOR ADJUSTMENT**. This box contains 12 volt electrics and is safe to touch. **Treat all other cables as main and very dangerous**.





While someone pushes the push scale to **2.5Kg** on the required sensor, using a small screwdriver adjust the screw on the small blue terminal that is marked as the correct one for that sensor. (eg, L1, L2)

Looking at the screen, the adjustment is:

Clockwise = down Anti Clockwise = up

Recheck all the sensors to ensure the values are around 50.

Carefully replace all parts ensuring the electrics are fully covered.

Covers must be screwed on prior to riding the horse

